

NUMBERALL

STAMP & TOOL CO., INC.

USER MANUAL & PARTS LIST

MODEL

301

S/N:

P.O. BOX 187, 1 HIGH ST.
SANGERVILLE, ME 04479

www.numberall.com
office@numberall.com

TEL: 207-876-3541
FAX: 207-876-3566

MODEL 301 HAND-OPERATED ROLL MARKING PRESS

Uncrating Procedure

1. The Model 301 is shipped bolted to a wooden skid. It is covered with a cardboard box that is stapled and banded to the wooden skid.
2. Cut the plastic shipping bands. Cut the cardboard box all the way around, within a couple of inches of the top of the wooden skid.
3. Lift off the cardboard cover, remove the protective plastic bag and unbolt the press.
4. The Model 301 weighs 80 pounds and should be lifted with caution.
5. Bolt the press securely to a solid bench to avoid accidental upset.
6. The Model 301 is capable of **forces exceeding 2 tons. KEEP BOTH HANDS FREE OF THE TABLE AREA WHEN OPERATING THE PRESS HANDLE.**
7. Any shipping damage to the press must be reported immediately to the common carrier and to Numberall.

Product Description

The Model 301 is a versatile and compact press, designed for stamping small, round parts. By using a roller die flat parts can be stamped. The Model 301 is an ideal choice where bench space is restricted. It is intended for continuous, heavy-duty use.

Bench area is 10" x 14-1/2" x 15-1/2" high. The mounting base is 10-1/2" x 14" (outside dimensions). Platform area is 7-1/2" x 11". Maximum clearance between the ram and table is 5-3/4", and table vertical travel is 1-3/4". Lateral travel is 5-1/2".

An automatic tripping attachment is another option available, which when using the Model 50 Numbering Machine, allows the Model 50 to advance to the next consecutive number.

Maximum Character Chart

For Models 301, 301A Presses

The Model 301 can easily exert a 2-ton force. The following chart depicts the maximum number of characters the Model 301 is capable of stamping during each impression, based on character size and type of material. The chart is conservative, so the recommendations can be exceeded in many cases. Variations in the hardness of a material will affect stamping results.

Character Size	Mild Steel	Aluminum
1/4	1	2
3/16	2	2
5/32	2	3
1/8	3	3
3/32	3	3
1/16	3	3

Note: The above chart is based upon the maximum number of characters for a legible impression (.002”-.003” depth).

Function of Controls

1. OPERATING HANDLE (301-384) - The operating handle is used to move the sliding head left and right across the work. If the vertical adjustment of the dovetail slide (301-402) is correct, little effort is required to push or pull the handle.
2. DEPTH OF IMPRESSION KNOB (301-388) - The depth of impression adjustment knob is located on the top of the sliding head. Turning the knob counter-clockwise raises the marking device and turning the knob clockwise lowers the marking device.
3. TORQUE BAR GIBS (301-394) - These gibs, located above and below the torque bar (301-398), allow vertical adjustment of the sliding head. If play develops in the sliding head, or the dovetail slide is not perpendicular to the base plate, it will be necessary to adjust these gibs. Loosen all of the jam nuts. Evenly screw the top two set screws in or out as required, while evenly

turning the bottom two set screws in the opposite direction. Do not over-tighten. The gibs are adjusted correctly when the dovetail slide is perpendicular to the base, and the sliding head has no play. Retighten the jam nuts, while holding the set screws stationary.

4. DOVETAIL RAM GIB (301-394) - This gib, located between the dovetail ram (301-402) and the sliding head (301-392), eliminates play in the ram head. If the ram head develops left and right play, it will be necessary to tighten the gib. While holding the two allen head set screws (301-396) stationary, loosen the locking nut on each. Evenly tighten the two set screws until left and right play is eliminated. Do not over-tighten. While holding the two allen head set screws stationary, retighten the locking nuts. This adjustment may be required after initial break-in.
5. MARKING DEVICE MOUNTING SCREW (301-404) - This button-head machine screw holds the marking device against the dovetail slide.
6. MARKING DEVICE ALIGNING SCREWS - These two allen set screws are located near the bottom of the dovetail slide on the left and right hand sides. They serve to adjust and tighten the marking device. By turning one set screw in, while turning the other out, the angle of the marking device, relative to the base, can be changed. Both should be tight for marking.
7. ADJUSTABLE HOLDING FIXTURE - This fixture is mounted with four cap screws to the base plate. The axes of the rolls must be parallel to the end-plate casting, in order to produce satisfactory roll marking. After squaring the edge of the fixture with the end plate, only tighten the two right-hand cap screws. These should remain tight unless the fixture needs to be re-aligned. The two left-hand cap screws are tightened after the roll spacing has been adjusted to the diameter of the part to be marked. The rolls should remain as close as practical, since it minimizes press force. Tighten the left-hand cap screws after adjustment.

Adjustments for Stamping

1. Keep both hands free of the base area when moving the operating handle.
2. Set up the adjustable holding fixture.
3. Attach the marking device to the dovetail slide, tightening the mounting screw and two set screws.
4. Turn the depth of impression adjustment knob counter-clockwise until the marking device is higher than the part.
5. Move the operating handle slowly, making sure the marking device clears the part.

6. Stop the handle when the marking device is above the part. Slowly rotate the depth of impression adjustment knob until it touches the part. Move the operating handle to the end. Rotate the knob 1/16 of a turn and try a sample stamping. It may be necessary to repeat this until a satisfactory depth is obtained.
7. The marking device should not chatter violently as it passes over the part. If it does, reduce the depth of impression.
8. If the work creeps fore and aft in the adjustable holding fixture, then the fixture needs to be aligned.
9. If the impression is uneven back to front, the dovetail slide is not perpendicular to the base and needs to be aligned.
10. If the impression is uneven, beginning to end, around the circumference, the marking device set screws need adjustment.

Lubrication

1. Oil holes are provided in the following places:
 - a. On the sliding head, just below the depth of impression adjustment knob.
 - b. On the sliding head, just above the sliding head shaft, left and right.
 - c. On the cannon, just above the cannon pivot screw.
 - d. On the frame casting, just inside of the operating handle.

Use a few drops of light oil in these places if the surface appears dry. Oil daily if the press is in continuous service.

2. Place a few drops of oil on the dovetail slides and the surfaces of the torque bar, if these surfaces appear dry. Oil weekly if the press is in continuous use.


NUMBERALL STAMP & TOOL CO., INC.

BOX 187, HIGH ST.
SANGERVILLE, ME 04479
(207) 876-3541
FAX (207) 876-3566















WHEN ORDERING PARTS SPECIFY
SERIAL AND MODEL NUMBER

PARTS LIST MODEL 301

301-214 DOVETAIL GIB NUTS - 1/4 X 20 (2 REQ'D)
301-214 TORQUE BAR GIB NUTS - 1/4 X 20 (4 REQ'D)
301-382 OPERATING HANDLE KNOB
301-384 OPERATING HANDLE
301-386 KNOB RETAINING PIN - 5/32 X 3/4 ROLL PIN
301-388 DEPTH OF IMPRESSION ADJUSTMENT KNOB
301-390 DEPTH OF IMPRESSION ADJUSTMENT SCREW
301-392-H SLIDING HEAD
301-394 DOVETAIL GIB
301-396 DOVETAIL GIB SCREWS - 1/4 X 1 DOG PT. SOCKET SET SCREWS (2 REQ'D)
301-396 TORQUE BAR GIB SCREWS - 1/4 X 1 DOG PT. SOCKET SET SCREWS (4 REQ'D)
301-398 TORQUE BAR
301-400 TORQUE BAR GIBS (2 REQ'D)
301-402 DOVETAIL SLIDE
301-404 MARKING DEVICE MTG. SCREW - 3/8-16 X 3/4 BUTTON HD. SOCKET SCREW
301-406 SLIDING HEAD SHAFT
301-408 CANNON
301-410 OPERATING HANDLE SET SCREW - 1/4-20 X 1/2 SOCKET SET SCREW
301-412 CANNON PIVOT SCREW - 3/4 X 2 3/4 SOCKET HD. SHOULDER SCREW
301-414 CONNECTING LINK
301-416 CONNECTING LINK PIVOT SCREWS-3/8 X 1 SOCKET HD. SHOULDER SCREWS (2 REQ'D)
301-418 TORQUE BAR MTG. SCREWS - 1/4 X 1 SOCKET HEAD CAP SCREWS (4 REQ'D)
301-420 TORQUE BAR DOWEL PINS - 1/4 X 1 (2 REQ'D)
301-422 CASTING END PLATE MTG. SCREWS-1/2 X 1 3/4 HEX HD. CAP (2 REQ'D EACH END)
301-424 CASTING END PLATE DOWEL PINS - 5/16 X 1 3/4 (2 REQ'D EACH END)
301-426 BASE PLATE CASTING
301-428 LEFT END PLATE CASTING
301-430 RIGHT END PLATE CASTING

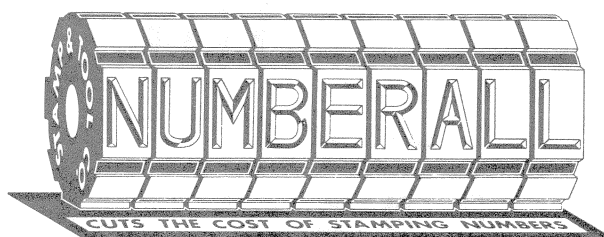



REPLACEMENT PARTS MODEL 301

 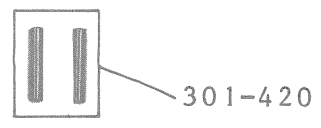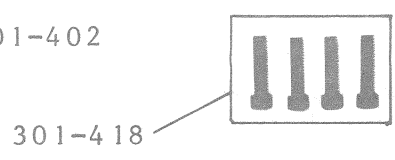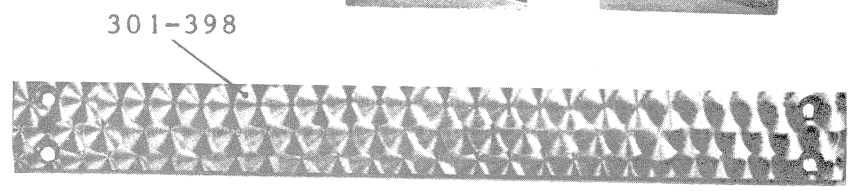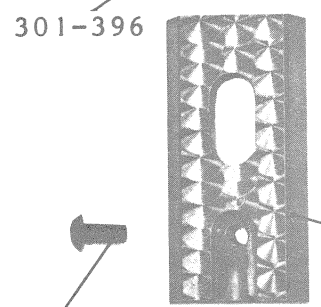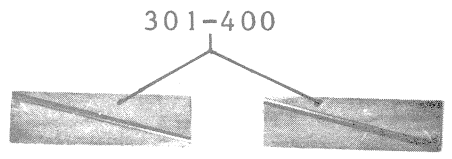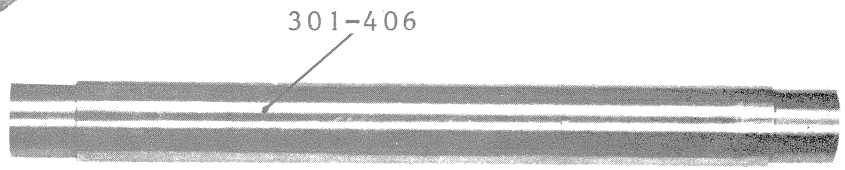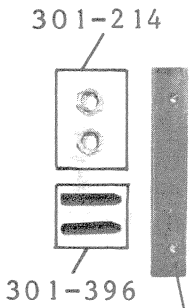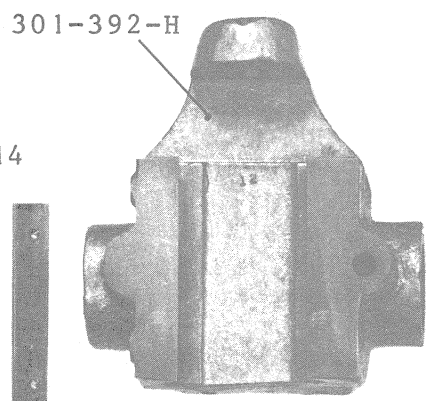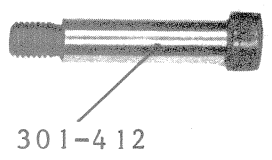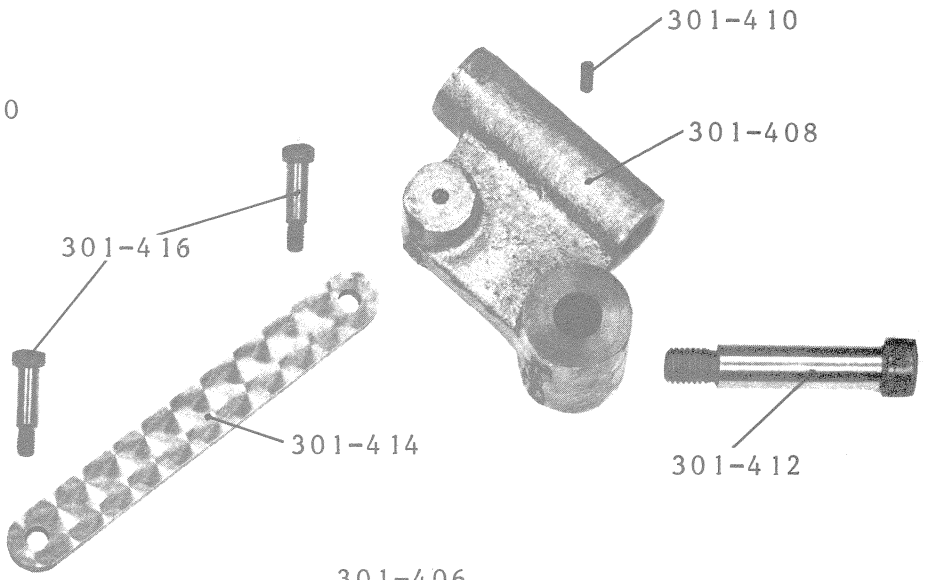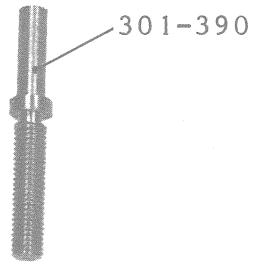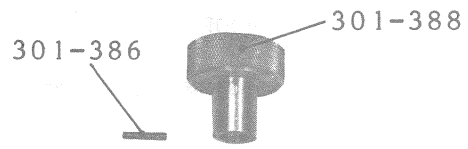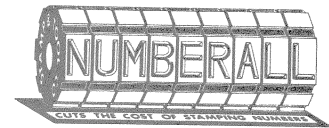

BASE PLATE CASTING
301-426

LEFT END PLATE CASTING
301-428

RIGHT END PLATE CASTING
301-430

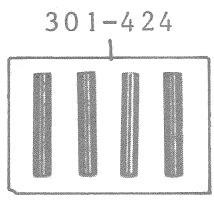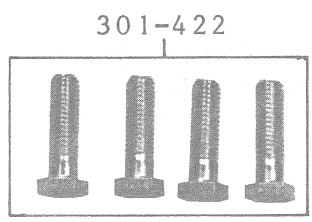

Numberall Stamp & Tool Co., Inc.

For extra copies of this manual please call or
visit our website.